

model: B-BAND T10 Manual

Foremost Technology for Absolute Acoustic Reproduction



B-BAND T10

B-BAND T10 USER'S GUIDE(EN)

International:
B-Band Ltd
Konttisentie 8 B,
40800 Vaajakoski, FINLAND
Tel: +358 14 332 9050
Fax: +358 14 332 9001
Email: sales@b-band.com
Internet: www.b-band.com

USA:
B-Band, Inc.
2009 Ranch Road 620 North, #820
Austin, TX 78734
Tel: (512) 266-3820, Fax: (512) 266-7203
Cell: (818) 601-0129
Email: pekka@b-bandusa.com
Internet: www.b-band.com

Germany:
B-Band GmbH
Fürstenrieder Str. 281
81377 München, GERMANY
Tel: +49-(0)89-990 176 41
Fax: +49-(0)89-990 176 42
Email: germany@b-band.com
Internet: www.b-band.com

B-Band, B-Band logo, T10 are either registered trademarks or trademarks of B-Band Ltd in the United States and / or other countries. Patented, patents pending. List of patents are available from B-Band Ltd upon request. All specifications are subject to change without prior notice. All rights reserved. Copyright © 1996-2010 B-Band Ltd.

21-08-2010

4 page

1 page


2010.9.11

B-Band T10 User's Guide

Thank you very much for purchasing this B-Band product!

Reading this guide thoroughly will give you the information necessary to fully understand the capabilities of this instrument and make the operation a simple and pleasurable sound experience.

CONTROLS

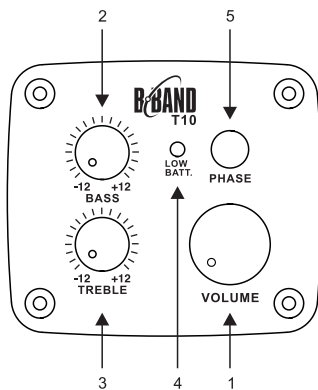

1. VOLUME
2. BASS EQ TONE CONTROL
3. TREBLE EQ TONE CONTROL
4. LOW BATT. (LOW BATTERY LED LIGHT)
5. PHASE ON/OFF BUTTON

DESCRIPTION OF CONTROLS

1. VOLUME: The VOLUME controls the output volume. Turned fully counter-clockwise it is completely OFF. Turned fully clockwise it is LOUD!

2. BASS EQ TONE CONTROL (for bass tones)

3. TREBLE EQ TONE CONTROL (for high tones)

The BASS and TREBLE controls are a 2-band equalizer for controlling tone.

The BASS and TREBLE tone controls are normal boost / cut shelving controls.

The center detent on these tone controls yields a flat tone response. "+12" boosts the tone; "-12" cuts the tone.

4. LOW BATT. (LOW BATTERY LED LIGHT)

The LED will light when the battery has lost power. Replace the battery when this light is on.

This LED light will flash once when a cable is connected to the output jack of the pickup system. This shows the battery is good.

BATTERY

A 9-volt battery powers the B-Band T10 preamp. Before connecting the instrument to an amplifier or mixer please check that a fully charged 9-volt battery is connected.

5. PHASE ON/OFF BUTTON

The PHASE button controls the phase of the pickup in relationship to the phase of the speaker(s) that are being used with the system.

Pushing this button in will put the pickup "out of phase." with the speaker(s). When the button is out the pickup is "in phase." This control is most useful for feedback control and will provide a subtle tone color.

If you are having a feedback issue, try pushing the PHASE button in (ON). It can help reduce the feedback.

SETTING UP THE PREAMP FOR USE

Check that the 9-volt battery is good.

Make sure that the amplifier or mixer volume is OFF and the EQ tone controls are at flat or off. Plug a guitar cable into the output jack of the guitar and into the input of the amplifier or mixer.

Turn the volume control of the T10 half way up (half way between "0" and "+12"). Turn the volume of the amplifier or mixer up enough to get a good level of sound. Refer to the amplifier or mixer instructions on how to set up best gain structure with an instrument for the cleanest possible sound. Once the desired volume level is found use the EQ on the T10 preamp to find your tone.

Turn up the BASS control some to add fullness to the sound. Use the TREBLE control to brighten the sound. Experiment and find a tone that suits your taste.

Use the EQ tone controls at the amplifier or mixer to fine-tune the tone.

Good luck and turn it UP!

If you have any further questions, comments or issues, please contact the dealer that you made your B-Band purchase from, or the B-Band distributor in your region, or directly to B-Band.